

INSTALLATION INSTRUCTIONS

1. Before removing door, mark desired position for unit on bottom of door. (Fig. 1)

2. Remove door by pulling hinge pins.

Hint .. position flat screw driver to catch top of pin and tap upward with hammer.

3. Use supplied "Door Hole Template" to trace entrance hole outline. (Fig. 2)

4. Use jigsaw to carefully cut entrance hole.

Note.. You may want to put masking tape on jig saw plate to prevent scratching of door.

5. Measure thickness of your door and select correct screws.

Note..if door is 1 3/8" thick, use (3) short (black) screws
if door is 1 3/4" thick, use (3) long (gold) screws.

6. Insert (3) screws into front of Frame A. (Fig 3)

Insert (4) pins into back of Frame B. (Fig. 3)

Hint.. one end of pin has a chamfer (tapered).
This end will insert much easier.

7. Align frames on opposite sides of door and gently tighten screws. (Fig.4)

Note.. do not tighten any screw completely .. tighten each screw a few turns and move to next .. continue until frames are snug on both sides.

8. Fold brush and insert middle of brush into top of frame opening. Press brush into place so that tabs on back of brush rest on lower screws. (Fig. 5)

9. Press wooden plugs into counter-sunk screw holes and apply desired finish. There are many attractive ways to decorate your CATHOLE.

.. CATHOLE can be painted or stained.

.. water-based polycrylics are durable & easy to use.

10. Re-install door and let kitty enjoy!

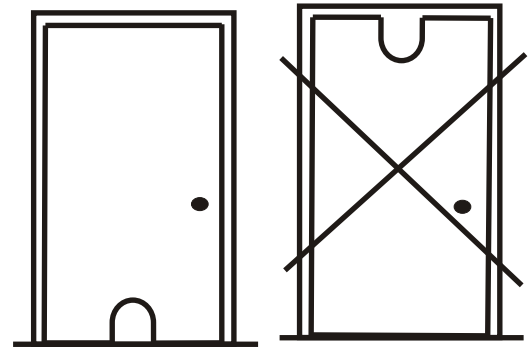


Fig. 1



Fig. 2

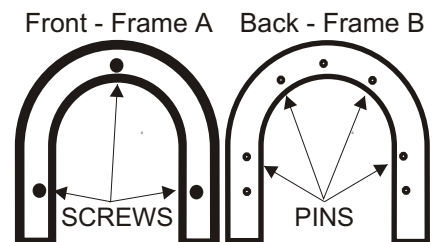


Fig. 3

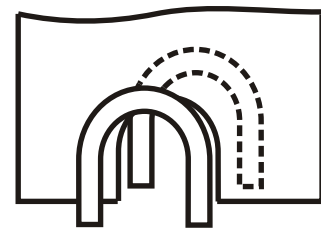


Fig. 4

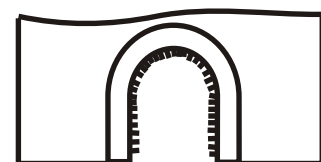


Fig. 5

**NOTE: Installation Photos
can be viewed on ...
www.cathole.com**



**US Patent Number
5,458,088
CH ENTERPRISE**